

Jak nastavit vrtačku

Ø vrtáku	otáčky	Ø vrtáku	otáčky
1	4 800	11	430
2	2 400	12	400
3	1 600	13	370
4	1 200	14	340
5	960	15	320
6	780	16	300
7	690	17	280
8	600	18	260
9	530	19	250
10	480	20	240

I.st. = 460

III.st. = 1 280

II.st = 680

IV.st = 2 660